


Swing Away Headrest Hardware

Assembly instruction

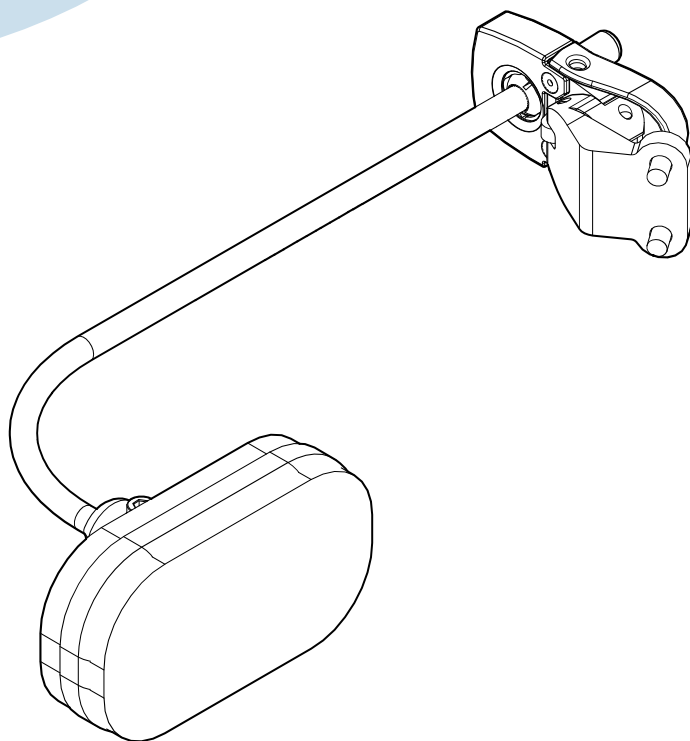

Thank you for choosing to be part of the Permobil family!

This is the Assembly Instruction of your new accessory. An assembly instruction is not a stand-alone document, but rather a complement to the wheelchair's User's Manual. It can sometimes refer to the User's Manual or the Service Manual.

This Assembly Instruction contains important information, installation instructions, and adjustment instructions. The instructions on how to install the accessory are intended for the service technician only. All other parts of the Assembly Instruction are intended for both the service technician and the user of the wheelchair. In the section Safety information, you find definitions of the admonitions used in this Assembly Instruction. Translations of these definitions can be found in the section Safety instructions. In the section General warnings for this product you find instructions for admonitions used in this Assembly Instruction, if any.

We hope that you are going to enjoy your new accessory. This accessory is intended to be used with a Permobil wheelchair. For more information regarding indoor and outdoor use, and for further information about your wheelchair, please see the wheelchair's User's Manual.

Contents

Important information	4
Safety information	5
Preparation.....	6
General warnings for this product	7
Installing swing away headrest	8
Adjusting swing away headrest	12
Rod shortening	16
Safety instructions.....	18
Contact us	21

Important information

Read this manual

Read this manual, including all admonitions and instructions, before you install, maintain, or use your accessory. Failure to follow these instructions and admonitions can lead to bodily injury or damage to the accessory or wheelchair.

Visually impaired

This document can be downloaded at www.permobil.com. If you are visually impaired, use the magnifying glass in your PDF reader to achieve desired text and picture size.

Order or download a copy of the instructions

If you need another copy of this Assembly Instruction, you can order one from Permobil. Please state the order number specified on the back cover. You can also download a copy from our website: www.permobil.com

Service and repairs

Please refer to the wheelchair's User's Manual for information about service and repairs.

Reporting an incident

Please contact Permobil or your dealer if you want to report an incident. The accessory does not have a serial number. However, if the accessory is attached to the wheelchair, we will ask for the wheelchair's serial number. This serial number is located on the chassis.

Warranty and expected service life

Contact your dealer or Permobil for information about the warranty period of this product. You can find the conditions of the warranty and further information about applicable warranties on our website.

This accessory has an expected service life of five years.

Scrapping and recycling

Contact Permobil for information about scrapping and recycling agreements in force.

Safety information

The following safety labels are used throughout this manual to draw attention to items of significant importance to safety:

Labels



Warning

Signal word used to indicate a hazardous situation which, if not avoided, could result in personal injury or death.



Caution

Signal word used to indicate a hazardous situation which, if not avoided, could result in damage to the product or to other property.



Crushing

Risk of crushing hands or other body parts.



Notice

Signal word used to indicate informative remarks.

Preparation



Necessary tools




4 mm, 5mm



Assembly kit

The following assemblies are covered by this instruction:

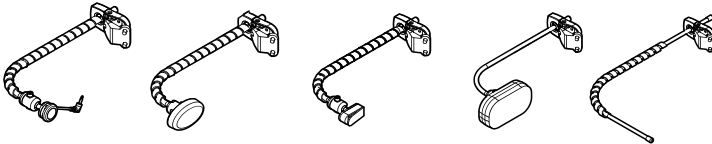

General warnings for this product



① Warning

Swing away headrest should not be used during transport in a motor vehicle.

MUL page 18



① Caution

Avoid driving on rough terrain when using a chin control or when using switches as part of a drive control system.

MUL page 18




① Notice

Clean the hardware when necessary. Do a regular maintenance checkup on the bolts and nuts.

MUL page 19

Installing swing away headrest


Overview

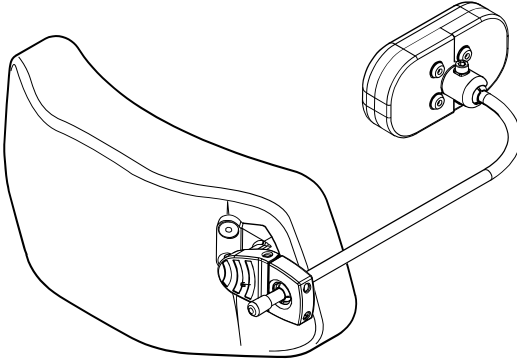

This assembly instruction shows mounting of swing away headrest hardware with pad. The same mounting procedures apply for all swing away headrest products.

i For service technicians only


1.

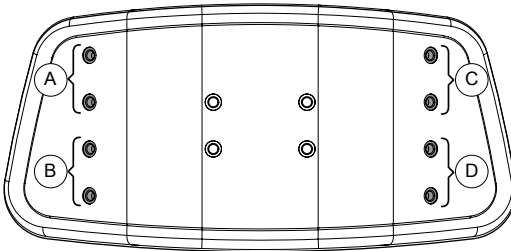


Four possible mounting positions (A, B, C and D)

2.


a = 9,8 Nm / 7,2 lbf.ft.

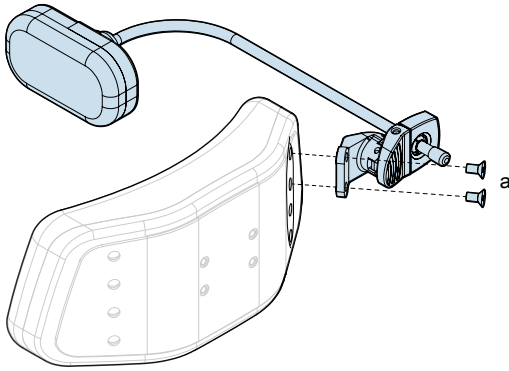


3.

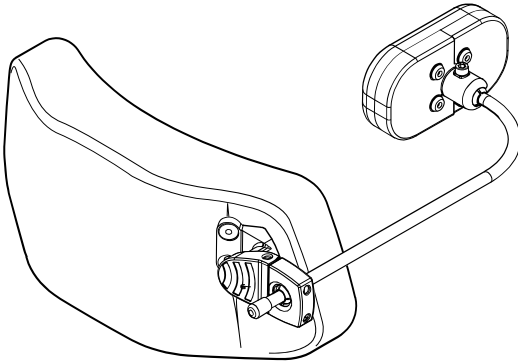


4.

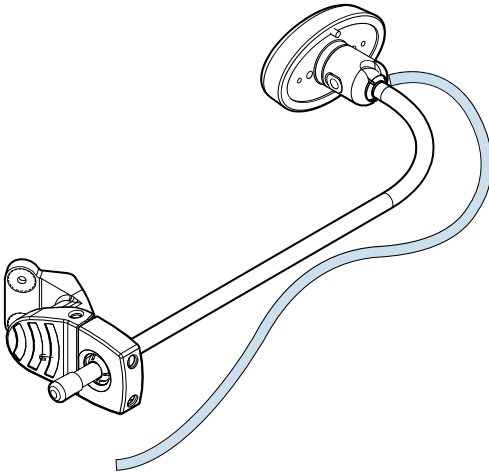

5.

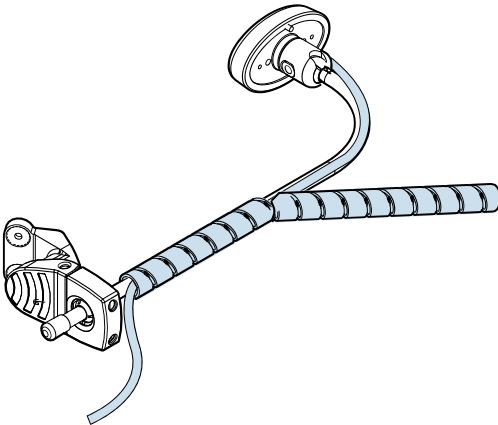


6.

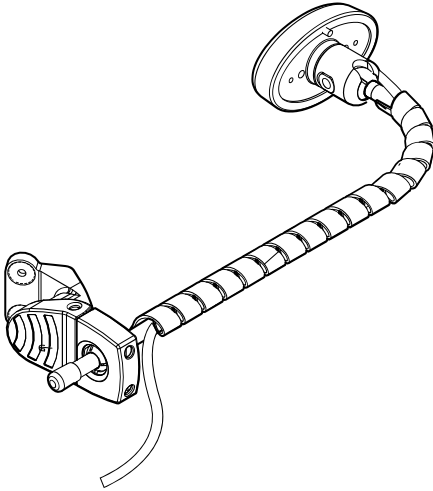


Adjusting swing away headrest

1.

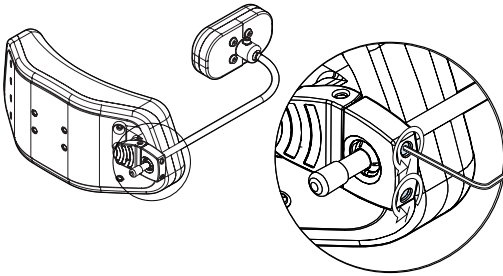

This assembly instruction shows adjusting of swing away headrest hardware with pad. The same adjusting procedures apply for all swing away headrest products.

2.

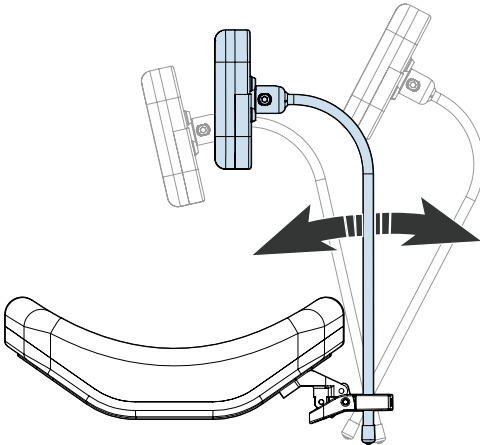


① Crushing


Risk of pinching or crushing hands and other body parts.

MUL page 19

3.

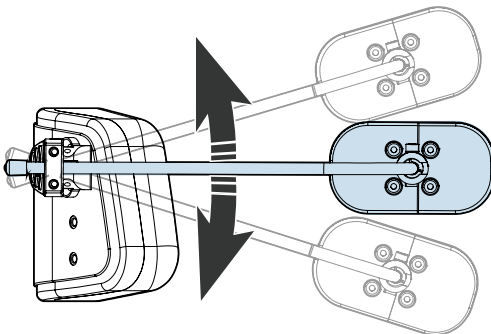


4.

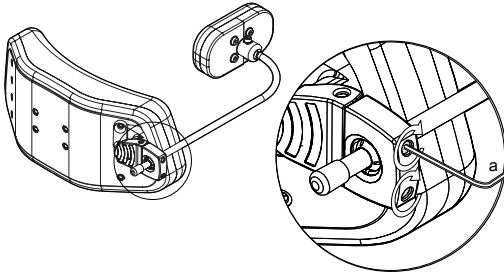


a = 5,7 Nm / 4,2 lbf.ft.


5.

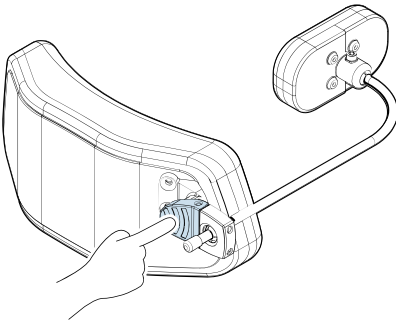

6.

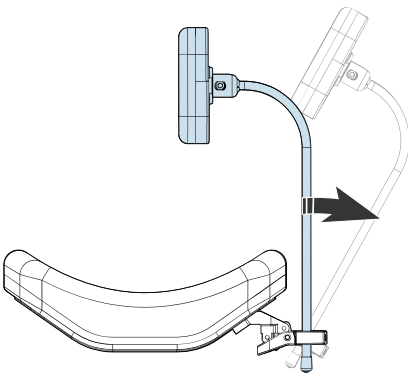

7.

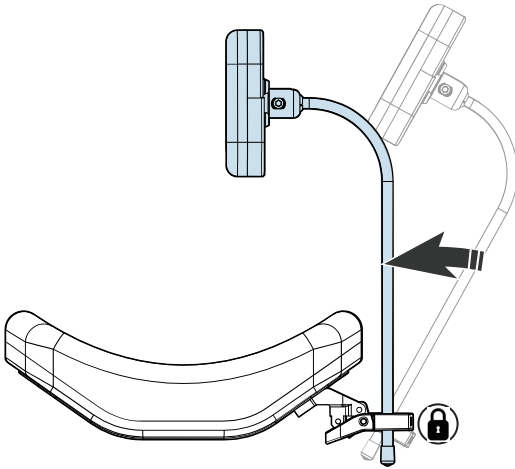


① Crushing


Risk of pinching or crushing hands and other body parts.

MUL page 19

8.

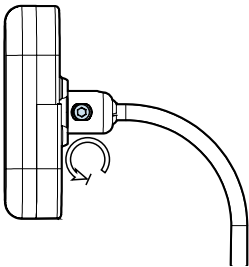


9.

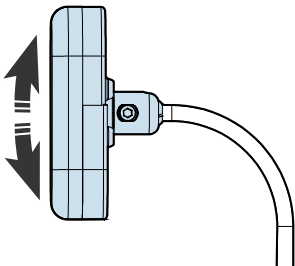

10.


a = 4,7 Nm / 3,7 lbf.ft.

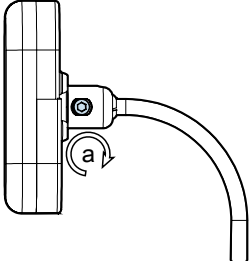


Rod shortening

i For service technicians only

1.

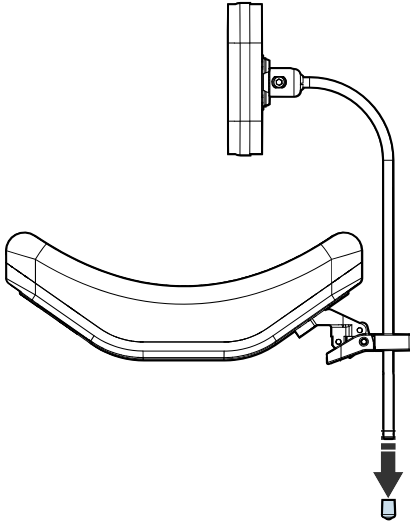


2.

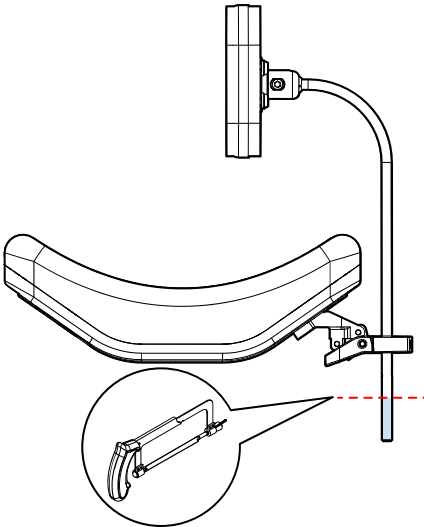


If the rod interferes with any other parts of the wheelchair, the rod may be shortened.

3.

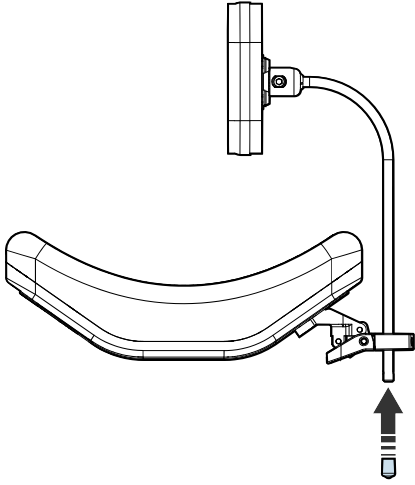

4.

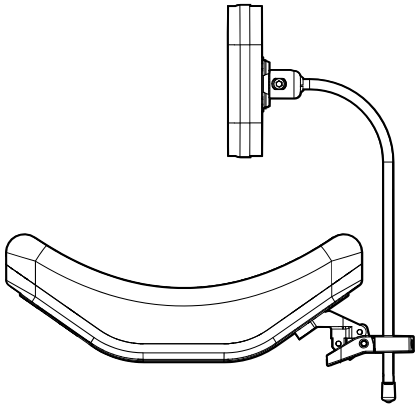

Safety instructions

Warning



① Warning

- US:** Swing away headrest should not be used during transport in a motor vehicle.
- DE:** Die schwenkbare Kopfstütze darf nicht während des Transports in einem Fahrzeug verwendet werden.
- UK:** The swing away headrest should not be used during transport in a motor vehicle.
- CA:** L'appui-tête escamotable ne doit pas être utilisé pendant le transport dans un véhicule automobile.
- FR:** L'appui-tête pivotant ne doit pas être utilisé pendant le transport dans un véhicule motorisé.
- IT:** Non utilizzare il poggiatesta oscillante durante il trasporto su veicoli a motore.
- NL:** Draai de hoofdsteun weg. Deze wordt niet gebruikt tijdens transport in een motorvoertuig.
- NB:** Swing away-nakkestøtte må ikke brukes under transport i motorkjøretøy.
- US:** O descanso para cabeça Swing away não deve ser utilizado durante transporte em veículo motorizado.
- SL:** Med transportom v vozilu ne smete uporabljati odmičnega naslona za glavo.
- ES:** No se debe utilizar el reposacabezas abatible durante el transporte en un vehículo motorizado.
- SV:** Använd inte swing away-huvudstöd under transporter i fordon.

Caution



① Caution

- US:** Avoid driving on rough terrain when using a chin control or when using switches as part of a drive control system.
- DE:** Vermeiden Sie das Fahren auf unwegsamem Gelände, wenn Sie eine Kinnsteuerung oder Schalter als Teil des Fahrsteuerungssystems verwenden.
- UK:** Avoid driving on rough terrain when using a chin control or switches as part of a drive control system.
- CA:** Évitez de conduire sur un terrain accidenté lorsque vous utilisez une commande au menton ou lorsque vous utilisez des interrupteurs dans le cadre d'un système de commande de conduite.
- FR:** Évitez de rouler sur un terrain accidenté lorsque vous utilisez une commande au menton ou que le système de commande de conduite est équipé d'interrupteurs à bascule.

- IT:** Non guidare su terreni accidentati se si utilizzano comandi azionati con il mento o un sistema di comandi di guida mediante interruttori.
- NL:** Voorkom het rijden op ruw terrein bij het gebruik van een kinbesturing of als u schakelaars gebruikt als onderdeel van een stuursysteem.
- NB:** Unngå å kjøre på ulendt terreng når du bruker hakestyring eller når du bruker brytere som del av et kjørestyringsystem.
- US:** Evite dirigir em terreno acidentado quando utilizar o controle para o queixo ou quando utilizando interruptores como parte do sistema de controle
- SL:** Ko uporabljate oporo za brado ali stikala kot del sistema nadzora vožnje, se izogibajte vožnji po grobem terenu.
- ES:** Cuando utilice un mando de barbilla o interruptores, como parte de un sistema de control de conducción, evite conducir en terrenos accidentados.
- SV:** Undvik att köra på ojämnt underlag när hakstyrning används eller när switchar används som en del av styrsystemet.

Crushing



① Crushing

- US:** Risk of pinching or crushing hands and other body parts.
- DE:** Gefahr des Einklemmens oder Quetschens von Händen und anderen Körperteilen.
- UK:** Risk of pinching or crushing hands and other body parts.
- CA:** Risque de pincement ou d'écrasement des mains ou d'autres parties du corps.
- FR:** Risque de pincement ou d'écrasement des mains et d'autres parties du corps.
- IT:** Pericolo di schiacciamento per le mani e altre parti del corpo.
- NL:** Risico van bekneld raken of verbrijzelen van handen en andere lichaamsdelen.
- NB:** Fare for at hender og andre kroppsdeler blir klemt eller knust.
- US:** Perigo de apertar ou amachucar as mãos e outras partes do corpo.
- SL:** Nevarnost ukleščanja ali zmečkanja rok in drugih delov telesa
- ES:** Riesgo de pellizcarse o aplastarse las manos y otras partes del cuerpo.
- SV:** Risk att klämma eller krossa händer och andra kroppsdelar.

Notice



① Notice

- US:** Clean the hardware when necessary. Do a regular maintenance checkup on the bolts and nuts.
- DE:** Reinigen Sie die Hardware, wenn nötig. Warten Sie Schrauben und Muttern regelmäßig.

- UK:** Clean the hardware when necessary. Do a regular maintenance checkup on the bolts and nuts.
- CA:** Nettoyez le matériel au besoin. Effectuez un entretien régulier des boulons et des écrous.
- FR:** Nettoyez la visserie si nécessaire. Contrôlez et entretenez régulièrement les vis et les écrous.
- IT:** Pulire le parti meccaniche quando necessario. Controllare regolarmente dadi e viti.
- NL:** Reinig de hardware waar nodig. Controleer de bouten en moeren regelmatig.
- NB:** Rengjør utstyret ved behov. Utfør jevnlig vedlikeholdskontroll av boltene og mutterne.
- US:** Limpe o hardware quando necessário. Faça uma verificação de manutenção regularmente em parafusos e porcas.
- SL:** Opremo očistite po potrebi. Redno vzdržujte vijake in matice.
- ES:** Limpie el equipo cuando sea necesario. Realice una verificación periódica de mantenimiento de los pernos y tuercas.
- SV:** Rengör fästdetaljerna vid behov. Kontrollera regelbundet bultar och muttrar.

Contact us

Permobil AB

Box 120

861 23 Timrå

Sweden

Tel.: +46 60 59 59 00

Fax: +46 60 57 52 50

E-mail: info@permobil.com

Web: www.permobil.com

Permobil Inc.

300 Duke Drive

Lebanon, TN 37090

USA

Tel.: 800.736.0925

Fax: 800.231.3256

E-mail: TechSupport@permobil.com

Web: www.permobilus.com

permobil

Produced and published by Permobil

Edition: 2

Date: 2018-07-31

Order no: 334561 mul



7 330818 349842